

Procedure to Access Fuji Violet Platesetters Usage Data:

— Connect a PC with Hyperterminal to the machine with a serial cable

— **Hyperterminal setup:**

— Baud: 9600

— Databits: 8

— Parity: None

— Stopbit: 1

— Flow Control: None

— Hit enter to bring up the following prompt:

— main>

— Type diagnostics and hit enter

— Enterpassword> will come up, type uk1 and hit enter

— Hit yes at prompt about Date & Time

— Diag> will come up, type log_utils and hit enter

— Utils> will come up, type disp_stats and hit enter

— Save this log file