

Procedure to Access Screen PT-R Usage Data

- On the display panel go to User Maintenance - hit OK
- Choose ETC - hit OK
- Next choose the Consumable Timer Menu
 - hit OK to access display usage data
- Return to ETC. - hit OK
- Choose Laser Power Measure - hit OK
- Next choose 2400 DPI - hit OK
- (On a PT-R 8600 only) Read remain % of laser life for each diode
- Hit next to get to next set of diode readings